


© 2017 California Department of Transportation All Rights Reserved

## NOTES:

- 1. Wye strainer and fittings must be the same size as the backflow preventer shown on the plans.
- 2. Backflow preventer assembly manifold pipe must be the same pipe as the supply line (main) pipe to be installed from the water meter to the backflow preventer assembly.
- 3. All metal in contact with soil and Portland Cement Concrete must be wrapped with 2" wide plastic backed adhesive polyethylene tape 20 mil thick with  $\frac{1}{2}$ " overlap.

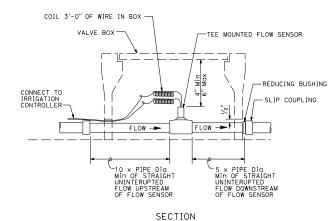

FLOW SENSOR


STATE OF CALIFORNIA DEPARTMENT OF TRANSPORTATION

## LANDSCAPE DETAILS

NO SCALE


RSP H7 DATED JULY 21, 2017 SUPERSEDES STANDARD PLAN H7 DATED OCTOBER 30, 2015 - PAGE 236 OF THE STANDARD PLANS BOOK DATED 2015.

REVISED STANDARD PLAN RSP H7

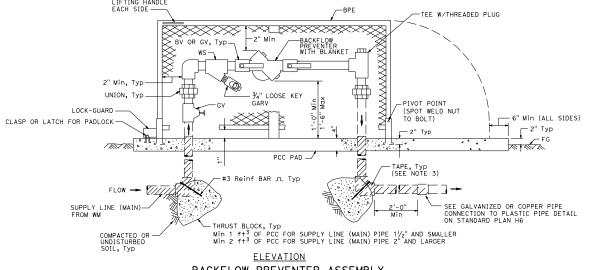

## BACKFLOW PREVENTER ASSEMBLY

IN ONE PIECE ENCLOSURE

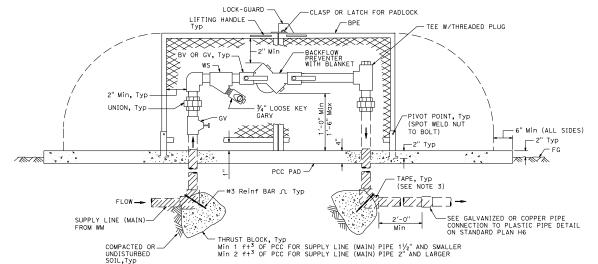

## ELEVATION BACKFLOW PREVENTER ASSEMBLY

IN TWO PIECE ENCLOSURE